



MH222-XX

JOB# _____

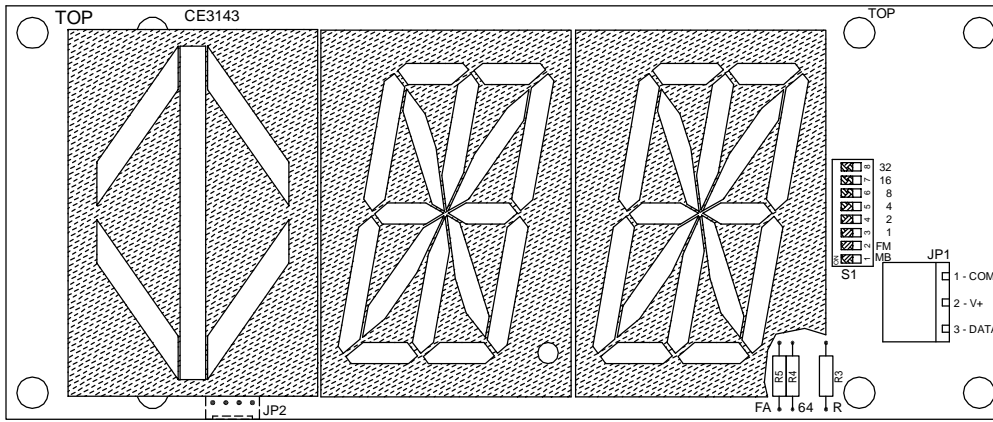

DEFAULT SETTINGS




CHART TO SELECT FLOOR POSITION WITH DIP SWITCH

CODE VERSION _____

BOARD VERSION CE3143 _____

VALUE	32	16	8	4	2	1	FLOOR
DIP SWITCH #	8	7	6	5	4	3	FLOOR
0	0	0	0	0	0	0	ALL CALL
0	0	0	0	0	0	1	FLOOR #1
0	0	0	0	0	1	0	FLOOR #2
0	0	0	0	0	1	1	FLOOR #3
0	0	0	0	1	0	0	FLOOR #4
0	0	0	0	1	0	1	FLOOR #5
0	0	0	0	1	1	0	FLOOR #6
0	0	0	0	1	1	1	FLOOR #7
0	0	0	1	0	0	0	FLOOR #8
0	0	0	1	0	0	1	FLOOR #9
0	0	0	1	0	1	0	FLOOR #10
0	0	0	1	0	1	1	FLOOR #11
0	0	0	1	1	0	0	FLOOR #12
0	0	0	1	1	0	1	FLOOR #13
0	0	0	1	1	1	0	FLOOR #14
0	0	0	1	1	1	1	FLOOR #15
0	1	0	0	0	0	0	FLOOR #16
0	1	0	0	0	0	1	FLOOR #17
0	1	0	0	0	1	0	FLOOR #18
0	1	0	0	0	1	1	FLOOR #19
0	1	0	0	1	0	0	FLOOR #20
0	1	0	0	1	0	1	FLOOR #21
0	1	0	0	1	1	0	FLOOR #22
0	1	0	0	1	1	1	FLOOR #23
0	1	0	1	0	0	0	FLOOR #24
0	1	0	1	0	0	1	FLOOR #25
0	1	0	1	0	1	0	FLOOR #26
0	1	0	1	0	1	1	FLOOR #27
0	1	0	1	1	0	0	FLOOR #28
0	1	0	1	1	0	1	FLOOR #29
0	1	0	1	1	1	0	FLOOR #30
0	1	0	1	1	1	1	FLOOR #31
1	0	0	0	0	0	0	FLOOR #32
1	0	0	0	0	0	1	FLOOR #33
1	0	0	0	0	1	0	FLOOR #34
1	0	0	0	0	1	1	FLOOR #35
1	0	0	0	1	0	0	FLOOR #36
1	0	0	0	1	0	1	FLOOR #37
1	0	0	0	1	1	0	FLOOR #38
1	0	0	0	1	1	1	FLOOR #39
1	0	0	1	0	0	0	FLOOR #40
1	0	0	1	0	0	1	FLOOR #41
1	0	0	1	0	1	0	FLOOR #42
1	0	0	1	0	1	1	FLOOR #43
1	0	0	1	1	0	0	FLOOR #44
1	0	0	1	1	0	1	FLOOR #45
1	0	0	1	1	1	0	FLOOR #46
1	0	0	1	1	1	1	FLOOR #47
1	1	0	0	0	0	0	FLOOR #48
1	1	0	0	0	0	1	FLOOR #49
1	1	0	0	0	1	0	FLOOR #50
1	1	0	0	0	1	1	FLOOR #51
1	1	0	0	1	0	0	FLOOR #52
1	1	0	0	1	0	1	FLOOR #53
1	1	0	0	1	1	0	FLOOR #54
1	1	0	0	1	1	1	FLOOR #55
1	1	0	0	1	1	1	FLOOR #56
1	1	0	0	1	1	1	FLOOR #57
1	1	0	0	1	1	1	FLOOR #58
1	1	0	0	1	1	1	FLOOR #59
1	1	0	0	1	1	1	FLOOR #60
1	1	0	0	1	1	1	FLOOR #61
1	1	0	0	1	1	1	FLOOR #62
1	1	0	0	1	1	1	FLOOR #63

The Micro Comm driver must be programmed to send messages with the level required to activate the features listed below. Level 0 messages will always be displayed, regardless of DIP switch or resistor settings.

For message blocking, turn on DIP switch 1 (MB). This will block level 1 and level 3 messages from being displayed.

To blank the display during a fire main (level three) message, turn on DIP switch 2 (FM).

To blank the display during a fire alternate (level two) message, remove resistor R5 (FA) from the board.

DIP switches 3-8 off and resistor R4 (64) installed is an all call using travel signals. DIP switches 3-8 on and resistor R4 (64) removed is an all call using arrival signals.

All MH222 displays are able to operate in arrival mode. Use the chart above to set the dip switch to the desired floor. The Micro Comm driver must be set up properly to send arrival information.

To use the MH222 as an arrival unit above floor 63, remove resistor R4 (64) from the board and set the DIP switches as shown on the chart, adding 64 to the floor number shown. For example, to set the MH222 for floor 75, remove resistor R4 and set the DIP switches for floor 11 (64+11=75).

To operate the MH222 as a rear unit remove resistor R3 (R) from the board. NOTE: The Micro Comm driver must be sending the MC2000 data stream to use this feature. Call Tech Support at 419-636-6705 for more information.

NOTE: MUST BE USED WITH A CLASS 2 POWER SUPPLY.

DATE DRAWN: 05/05/05	DRAWN BY: DAC	REQUESTED BY: JK	C.E. ELECTRONICS, INC. 2107 Industrial Drive Bryan, Ohio 43006 (419) 636-6705
BOARD NUMBER: 3143	LAST DATE REVISED: 08/25/05	APPROVED BY:	
PRODUCT MH222 MICRO COMM DISPLAY			DWG. NO. MH222004
			REV. B